

Included items:

One E-Series Touchcomputer
One US Power Cable
One European Power Cable

One Extended Cable Cover
One Screw to Secure Front Cover
One Power Brick

www.elotouch.com

可能包含的有害物质名称和含量。

中国电子电气产品环境信息

触控一体机	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电缆组件	X	0	0	0	0	0
玻璃外壳	X	0	0	0	0	0
液晶面板	X	0	0	0	0	0
金属框架	X	0	0	0	0	0
塑胶盖	0	0	0	0	0	0
印制线路板	X	0	0	0	0	0

本表格依据 SJ/T 11364 的规定编制。
0: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。
X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。

标志说明

根据 SJ/T11364 的要求, 电子信息产品标有以下污染控制标识。

Quick Installation Guide

E-Series RevC

LCD Multifunction Touchcomputer

Elo Touch Solutions Technical Support

Online self-help:
www.support.elotouch.com

North America

800-ELO-TOUCH
Tel +1 408 597 8000
Fax +1 408 597 8050
EloSales.NA@elotouch.com

Asia-Pacific

Tel +86 (21) 3329 1385
Fax +86 (21) 3329 1400
EloAsia@elotouch.com

Europe

Tel +32 (0)16 70 45 00
Fax +32 (0)16 70 45 49
elosales@elotouch.com

Latin America

Tel 786-923-0251
Fax 305-931-0124
EloSales.LATAM@elotouch.com

Revision B
P/N E001109

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Elo (logo) and Elo Touch Solutions are trademarks of Elo and its Affiliates.




Please go to <http://www.elotouch.com/products/computers/default.asp> to download the user guide in your language for more product information

1 Please Note:


Touchscreen will not work with protective film on front and edges of screen. Remove both films before attempting to use this product.



2 Tilt display back and remove cover A. Cover B can also be removed for additional access.

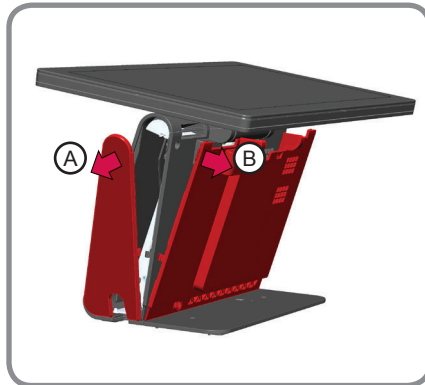

3 Connect power

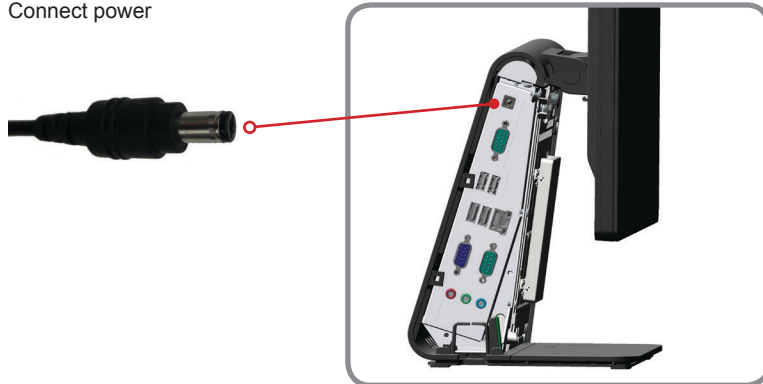

4 Additional Ports/Connections

Ethernet

USB

VGA

Serial



Cable exit

5 Re-install cover A and B.

Optional extended cable cover also shown



6 Power on

